



USER GUIDE

LS 2208

Radwag

Distributed by AKRIBIS



BAR CODE SCANNER

**PROGRAMMING BAR CODE SCANNER - LS SYMBOL /
MOTOROLA**

USER MANUAL

ITKU-94-01-11-16-EN



RADWAG BALANCES AND SCALES
ADVANCED WEIGHING TECHNOLOGIES

Table of contents

- 1. Setting the Prefix and Suffix according to standard RADWAG 3**
 - 1.1. Setting the Prefix - Hex: 01 3
 - 1.2. Setting the Suffix - Hex: 0d 4
- 2. Activation / Enable Prefix and Suffix 5**
- 3. Deactivation / Disable Prefix and Suffix 5**
- 4. Setting HID keyboard USB standard 6**
- 5. Setting USB/RS323 Emulation (Windows 32bit)..... 6**
- 6. Setting USB/RS323 Emulation (Windows 64bit)..... 6**
- 7. Setting the RS232 interface 6**

1. Setting the Prefix and Suffix according to standard RADWAG

1.1. Setting the Prefix - Hex: 01



**Scan Prefix
(07h)**



1



0



0



1

1.2. Setting the Suffix - Hex: 0d



**Scan Suffix 1
(06h)**



1



0



1



3

2. Activation / Enable Prefix and Suffix



Scan Options



<PREFIX> <DATA> <SUFFIX>



Enter

3. Deactivation / Disable Prefix and Suffix



Scan Options



***Data As Is**



Enter

4. Setting HID keyboard USB standard



***HID Keyboard Emulation**

5. Setting USB/RS323 Emulation (Windows 32bit)



Simple COM Port Emulation

6. Setting USB/RS323 Emulation (Windows 64bit)



USB CDC Host

7. Setting the RS232 interface



***Indicates Default** ***Baud Rate 9600** **Feature/Option**



RADWAG BALANCES AND SCALES
ADVANCED WEIGHING TECHNOLOGIES

