CARE AND USE MANUAL

# Ultisil UHPLC Polar RP HPLC Column Care and Use Manual

Welch

Distributed by AKRIBIS



# Ultisil UHPLC Polar RP HPLC Column Care and Use Manual

**Dear User:**

Thank you for choosing our liquid chromatography column products! This manual is designed to help you use our products under optimal conditions and maximize column lifespan. Please read the usage instructions carefully before operation.

Ultisil UHPLC columns offer high efficiency and excellent batch-to-batch reproducibility, ensuring superior chromatographic data quality while reducing the need for repeated sample analysis and minimizing solvent consumption. UHPLC columns use dedicated guard columns and pre-columns.

# Ultisil UHPLC Polar RP HPLC Column Care and Use Manual

Ultisil UHPLC Polar RP is packed with 1.8 µm high-purity silica and can withstand pressures up to 15,000 psi. It is a reversed-phase column with selectivity distinct from conventional C18. It incorporates embedded polar groups, allowing the alkyl phase to remain water-solvated even under extremely low organic mobile phase conditions (including 100% aqueous mobile phase) without hydrophobic collapse. It offers enhanced retention and selectivity for polar compounds.

# Preparation Before Use

## Column Identification

To ensure the quality of every column, each column sold by Welch Materials is assigned a unique identification code. This code allows us to trace quality-related issues. Upon receiving your column, please follow these steps:

1. Verify that the packaging is intact and matches the ordered column model.
2. Ensure the package contains a COA report with the inspector's signature.
3. Check the column surface for any damage and confirm that the protective plugs on both ends are intact.
4. Verify that the column body bears a Welch Materials identification label. Confirm that the model and serial number on the box match those on the column label.

Note:

The packing material inside the column is composed of fine particles. Do not attempt to open the column arbitrarily, as the material may become airborne and pose a health risk. If opening is necessary, use appropriate protective measures.

## Installation

To achieve optimal column efficiency, use narrow-diameter tubing for connections. The connections to the column inlet and outlet must be tightly sealed, with the tubing ends polished and free of burrs or bevels. Use professional tools to cut and trim tubing.

1. Remove the column from its packaging. Check the direction of the eluent flow indicated by the arrow on the column body. Unscrew the protective plugs at both ends of the column. Position the column so that the eluent flow aligns with the direction indicated, as shown in Figure 1.

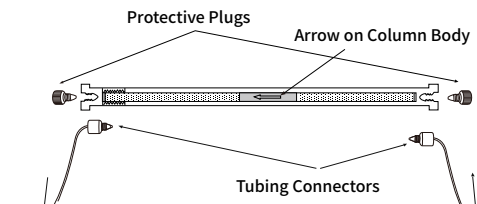



Figure 1. Column Installation

2. Carefully screw stainless steel or other compatible material fittings into both ends of the column. Ensure tight, zero-dead-volume connections to prevent leakage during operation.

## Product Specifications

| | |
|---|---|
| Column | Ultisil UHPLC Polar RP |
| USP Code | L1 |
| Pore Size | 120 Å |
| Specific Surface Area | 320 $m^2/g$ |
| Carbon Loading | 18 % |
| pH Range | 2.0-8.0 |
| Max. Temperature | 60 °C (mobile phase pH ⩽6.5) |
| | 40 °C (mobile phase pH ＞6.5) |
| Max. Pressure Tolerance | 15000 psi |

**Note:**

When using silica-based columns at pH ＞7, use buffers with concentrations not exceeding 20 mM and temperatures not exceeding 40°C to maximize column lifespan. Extreme pH or temperature conditions can significantly reduce column durability.

## Column Activation

(Recommended for new columns or those unused for over a month)

Ultisil UHPLC Polar RP columns are shipped in a solution of 75% acetonitrile in water. Activation should follow these steps:

**Step 1: Activation**

| Activation Procedure | | |
|---|---|---|
| Specification | ID⩽3 mm | ID＞3 mm |
| Flow Rate | 0.1 mL/min | 0.2 mL/min |
| Mobile Phase | 90% Acetonitrile | |
| Time | 4 hours | |
| Temperature | 30 °C | |

**Step 2: Transition**

If subsequent experiments involve buffer salts in the mobile phase, perform a transition procedure after Step 1.

| Transition Procedure | | |
|---|---|---|
| Specification | ID⩽3 mm | ID＞3 mm |
| Flow Rate | Method Flow Rate | |
| Mobile Phase | Buffer-free method mobile phase | |
| Time | 1 hour | |
| Temperature | 30 °C | |

Step 2 is skipped if no buffer salts are involved.

AKRIBIS · www.akribis.info · contacto@akribis.info

## Routine Column Washing:

| | | |
|---|---|---|
| Method Mobile Phase | Without acids, bases, salts | Containing acids, bases, salts; or ion-pairing reagents |
| Washing Mobile Phase | 100% Acetonitrile | Buffer-free Method mobile phase → 100% Acetonitrile |
| Flow Rate | Method Flow Rate | |
| Time | 30 mins each (Column Length ⩽100mm) | |
| | 40 mins each (Column Length ＞100mm) | |
| Storage | Store the column in the final washing solvent, with protective plugs tightly sealed. Place in a cool, dry place. | |

## Glossary of Terms:

**pH Range:** The pH range tolerable for the column's mobile phase and sample solutions.

**Specific Surface Area:** The surface area per gram of silica.

**Pore Size:** The diameter of pores within silica particles, selected based on analyte molecular weight.

**Carbon Loading:** The percentage of carbon content in bonded functional groups relative to the total silica mass.

**USP Code:** Universal code for bonded phases in the USP chromatography column database.

**Transition Mobile Phase:** A solvent used to gradually adjust the type and ratio of mobile phase, typically free of buffers, acids, and bases.

**Transition Procedure:** A procedure to ensure miscibility between activation mobile phase and method mobile phases using transition mobile phase.

**Maximum Pressure Tolerance:** The upper pressure limit the column can withstand. Long-term use is recommended at pressures below 60 MPa. Monitor the instrument's pressure for safe operation.

**Storage Solvent:** Solvent used during storage or transport to maintain the activity of packing material. Handle with appropriate protective measures.