

GUIDE

POTTS-Oceanus-6-580

Isotech


Distributed by AKRIBIS



Alternative methods of operating an **Industrial Laboratory**


■ A Basic Dry Block Calibrator

The thermometer under test is compared to the dry block controller value.
Useful for moderate temperature ranges and quick testing.

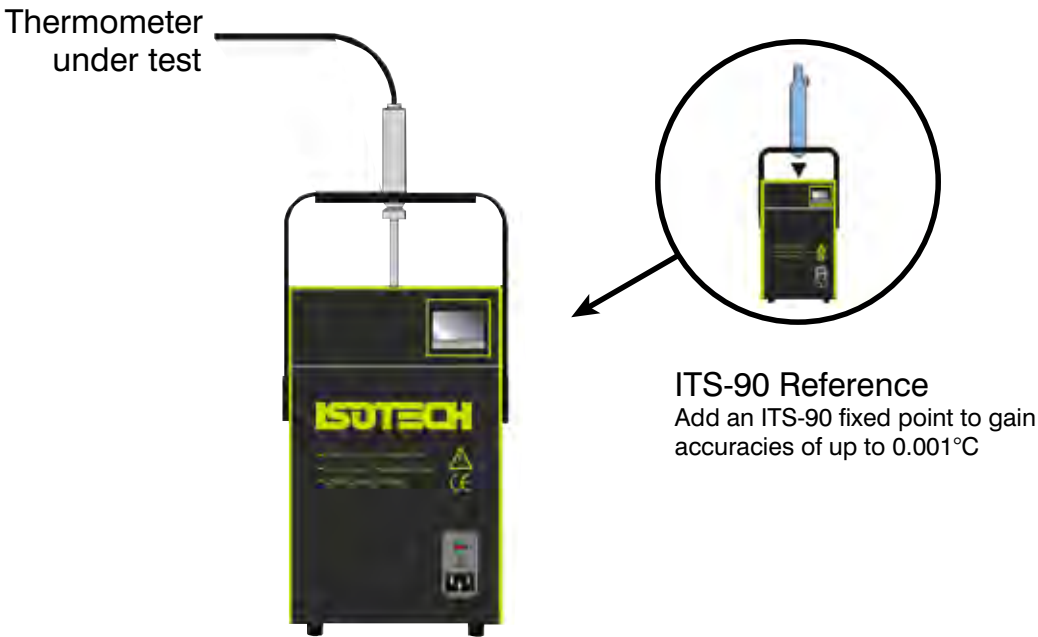


■ An ISO 9000 Calibration System

A thermometer under test is compared to a calibrated standard, for true traceability and clearly meets the requirements of ISO9000

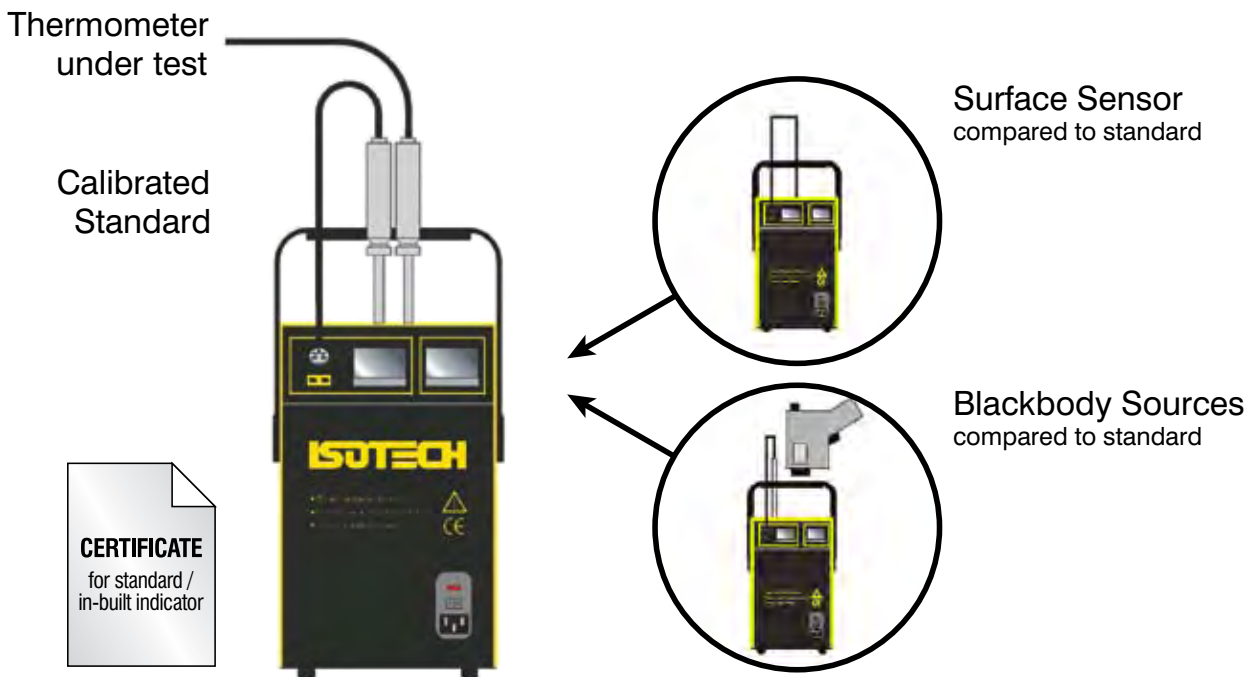

■ Using an External Indicator

Similar to the previous configuration but an external indicator TTI is used - one TTI can be used with many calibration baths - the bath or baths do not need a calibration certificate, but they need an evaluation report.

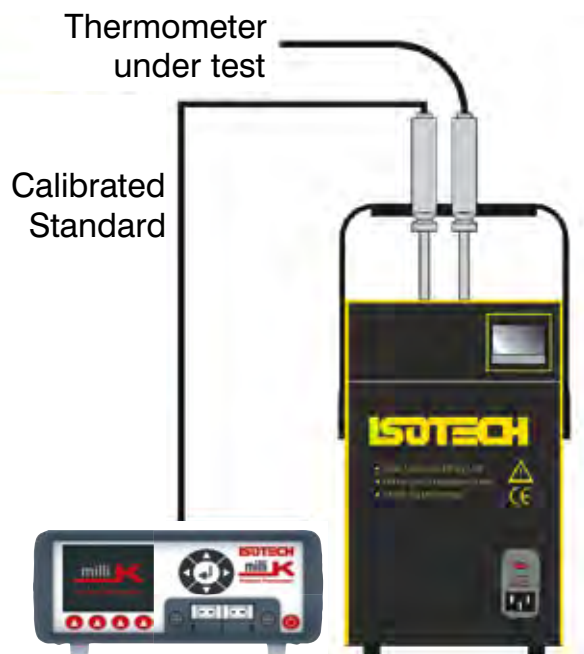


Here the B model is shown

Alternatively the S model may be used with the indicator free for use with a unit under test.



■ An example of Multiple Sensor Calibration

You can add the TTI and Selector Switch for multi-probe calibration - and add I-cal software for affordable automatic calibration systems.

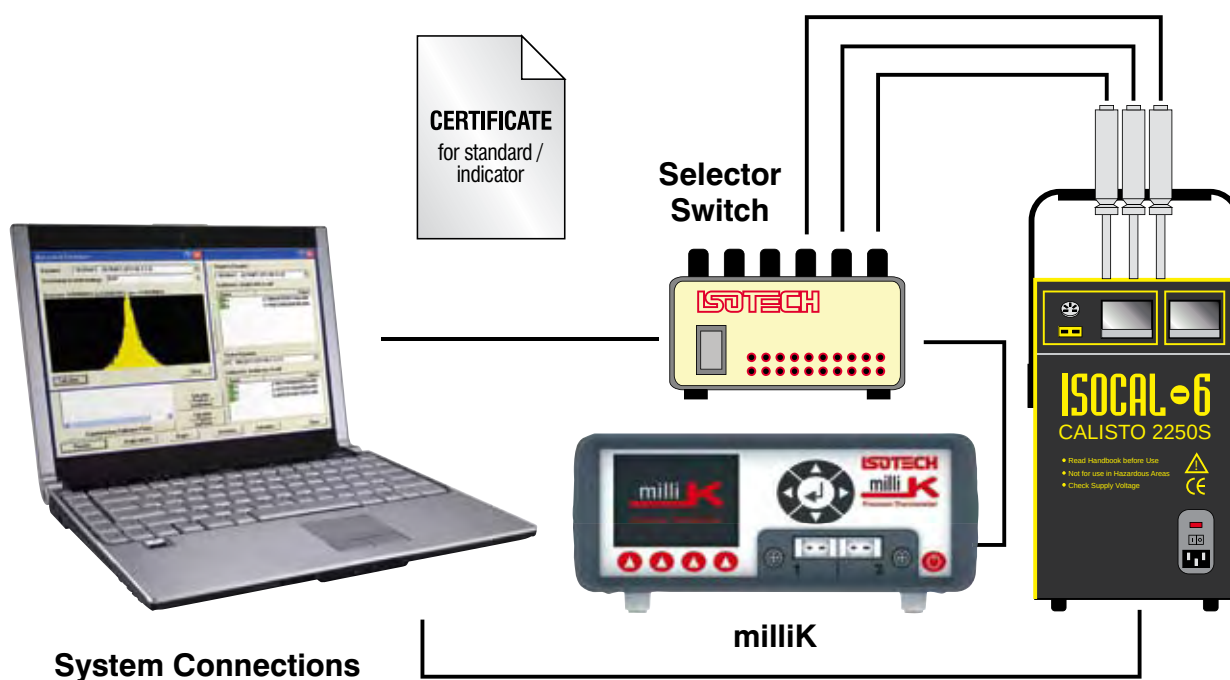

■ Many of the products can be used as a **Dry Block Calibrator** or as a **Liquid Bath**